

Model **RSU100**

RS-232 / USB COMMUNICATION ADAPTER

User's Guide

MARK - 10®


The RSU100 is a communication adapter used to convert RS-232 data from a Mark-10 device to USB format for PC use.

INCLUDED ITEMS:


- 1 RSU100 Communication Adapter
- 1 USB cable, 6'
- 1 Installation CD

SETTING UP

1. Plug the RSU100 into a USB port of a computer using the supplied USB cable. In a few seconds, the Windows “Found New Hardware” wizard (see figure below) will appear asking if you would like to search for software. Click “No, not this time”, then click “Next”.

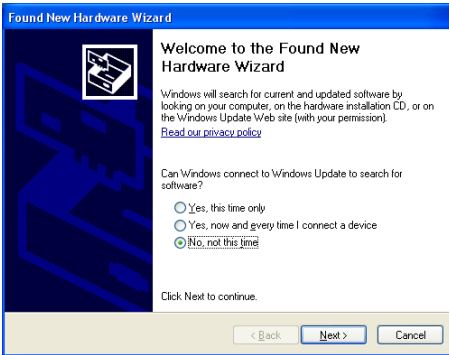

2. The following screen will appear:

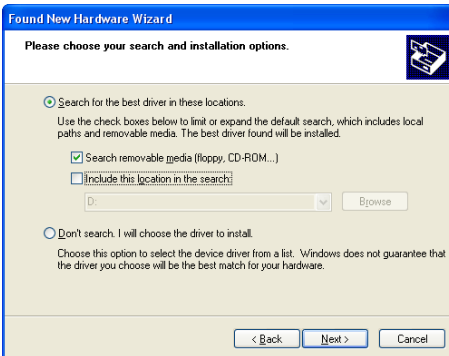


Place the enclosed Installation CD in the CD-ROM drive. Click “Search for the best driver in these locations” and check “Search removable media” then click “Next”.

3. The following screen will appear:



Click "Continue Anyway".

4. The following screen will appear:

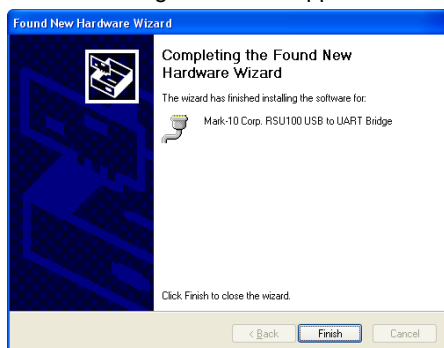

Click "Finish".

The RSU100 driver is now installed and ready to use.

LOCATING THE COM PORT NUMBER

Windows will assign a COM Port number to the RSU100. This number can be checked in Device Manager. To access Device Manager, go to Control Panel and click the icon labeled "Device Manager". Or, right click My Computer and select "Properties". Then, in the Hardware tab, click "Device Manager". Click the plus (+) sign next to "Ports" and locate the device named "Mark-10 Corp. RSU100 USB to UART Bridge (COMx)", where "x" is the COM Port number.

WARRANTY

Mark-10 Corporation expressly warrants to its buyer for three (3) years from the date of delivery that the goods sold are free from defects in workmanship and materials. Mark-10 Corporation will, at its option, repair or replace or refund the purchase price of goods found to be defective. This remedy shall be the buyer's sole and exclusive remedy. Any modification, abuse, exposure to corrosive environment or use other than intended will void this warranty. This warranty is in lieu of all other warranties, including implied warranties of merchantability and fitness for an intended purpose. In no event shall Mark-10 Corporation be liable for any incidental and consequential damages in connection with

OTHER MARK-10 PRODUCTS

A full line of force and torque measurement products and related items, including force gauges, torque gauges, force and torque test stands, sensors, grips, software, and more.



We make a measurable difference in force and torque measurement

Mark-10 Corporation
11 Dixon Avenue
Copiague, NY 11726
888-MARK-TEN
Tel: 631-842-9200
Fax: 631-842-9201
Internet: www.mark-10.com
E-mail: info@mark-10.com

